Built-in QC in every data point

Absolute size.

As a firm reference point.


Aggregation. Fully visible.

Fully visible.

Sample loss.


Revealed.

Quantified.

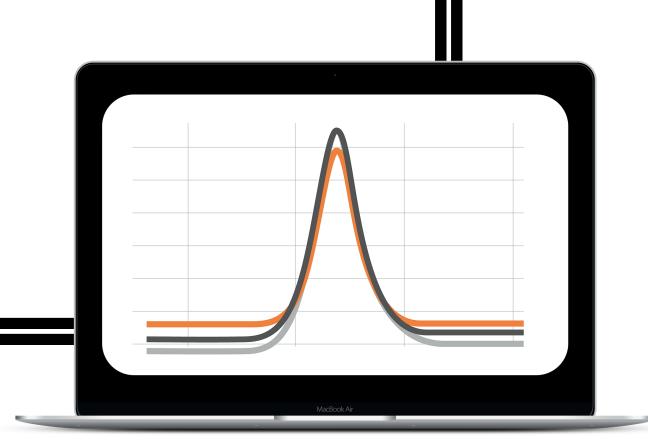

Viscosity.

Measured and compensated.

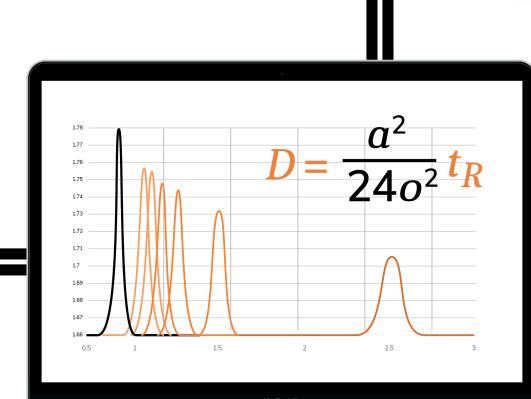




Polydispersity index.

Tells you about homogeneity.

Labelling quality.

PDB Correlator.

Links size with structural data.

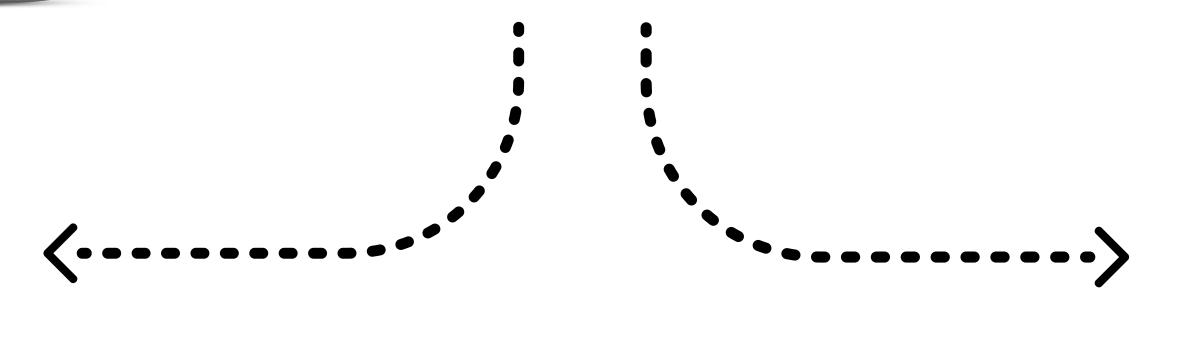

(March 1960) Fidabio

The power of 1st Principle.